



| | | | | | |
|-----------|---------------------------------------|----|-----------|---|----|
| DE | Gebrauchsanweisung Toaster | 4 | RO | Manual de utilizare Toaster | 34 |
| PL | Instrukcje obsługi Toaster | 10 | BG | Ръководство за употреба Toaster | 40 |
| CZ | Návod k obsluze Toaster | 16 | HR | Uputa za uporabu Toaster | 46 |
| SK | Návod na používanie Toaster | 22 | SL | Navodila za uporabo Toaster | 52 |
| HU | Használati utasítás Toaster | 28 | | | |



Aufbau (DE)

1. Brötchenaufsatz
2. Lift-Taste
3. Bedienfeld
4. LED-Leuchtring
5. 1-Scheibe Toast-Taste
6. Aufwärmen-/ Nachtoasten-Taste
7. Auftauen-Taste
8. Brötchenaufsatz-Taste
9. Einseitiges Toasten-Taste
10. Anzeige Bräunungsgrad
11. Plus-Taste
12. Minus-Taste
13. Stopp-Taste
14. Krümelschublade

Setup (PL)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (CZ)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (SK)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (HU)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (RO)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button

9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (BG)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (HR)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Setup (SL)

1. Roll attachment
2. Lift button
3. Control panel
4. LED light ring
5. 1-slice of toast button
6. Warm/retoast button
7. Defrost button
8. Roll attachment button
9. Single sided toasting button
10. Browning level display
11. Plus button
12. Minus button
13. Stop button
14. Crumb tray

Gebrauchsanweisung

Toaster

Wichtige Sicherheitshinweise

- Das Gerät darf nicht über eine externe Zeitschaltuhr oder Fernbedienung betrieben werden.
- Diese Geräte können von Kindern ab 8 Jahren sowie von Personen mit reduzierten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung und/ oder Wissen benutzt werden, wenn sie beaufsichtigt werden oder bezüglich des sicheren Gebrauchs des Gerätes unterwiesen wurden und die daraus resultierenden Gefahren verstanden haben.
- Kinder dürfen nicht mit dem Gerät spielen.
- Reinigung und Benutzer-Wartung dürfen nicht durch Kinder durchgeführt werden, es sei denn, sie sind älter als 8 Jahre und beaufsichtigt.
- Bewahren Sie das Gerät und sein Netzkabel außerhalb der Reichweite von Kindern unter 8 Jahren auf.

Stromschlaggefahr!

- Das Gerät darf nur in einem 230 V-Wechselstromnetz an einer vorschriftsmäßig installierten Steckdose mit Schutzleiter angeschlossen werden. Es muss sichergestellt sein, dass das Schutzleitersystem der elektrischen Hausinstallation vorschriftsmäßig installiert ist und die Sicherheitseinrichtungen (FI-Schalter) korrekt funktionieren.
- Während des Betriebes nicht in den Toaster greifen oder Gegenstände einführen.
- **Hinweis:** Die Sicherheitseinrichtung (FI-Schalter) regelmäßig durch Drücken der Prüftaste kontrollieren.
- **Achtung:** Brotscheiben in Toastern können brennen. Deshalb das Gerät nicht in der Nähe oder unterhalb von brennbaren Gegenständen (z.B. Vorhänge, Hängeschränke) benutzen und stets beaufsichtigen.
- **Vorsicht, Verbrennungsgefahr:** Die berührbaren Oberflächen des Toasters können während des Toastens sehr heiß werden, daher bitte nur an den Bedienelementen anfassen!

- Wenn das Netzkabel dieses Gerätes beschädigt wird, muss es durch den zentralen Kundendienst des Herstellers oder eine ähnlich qualifizierte Person ersetzt werden. Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen.
- Den Toaster nicht in Wasser tauchen.
- Bitte beim Reinigen nicht mit den Fingern in die Röstschlitze greifen und auch keine Gegenstände (z.B. Gabeln, Messer o.Ä.) einführen.
- Beim Toasten herabfallende Krümel sammeln sich in der Krümelschublade. Zum Herausziehen und anschließenden Entleeren drücken Sie kurz gegen die Krümelschublade.
- Dieses Gerät ist dafür bestimmt, im Haushalt und ähnlichen Anwendungen verwendet zu werden, wie beispielsweise:
 - in Küchen für Mitarbeiter in Läden, Büros und anderen gewerblichen Bereichen;
 - in landwirtschaftlichen Anwesen;
 - von Kunden in Hotels, Motels und anderen Wohneinrichtungen;
 - in Frühstückspensionen.

Das Gerät ist nicht für den rein gewerblichen Gebrauch bestimmt.

Vor dem Benutzen

Die Gebrauchsanweisung aufmerksam lesen. Sie enthält wichtige Hinweise für den Gebrauch, die Sicherheit und die Wartung des Gerätes. Sie soll sorgfältig aufbewahrt und gegebenenfalls an Nachbenutzer weitergegeben werden. Das Gerät darf nur für den vorgesehenen Zweck, gemäß dieser Gebrauchsanweisung, verwendet werden. Beim Gebrauch die Sicherheitshinweise beachten.

Technische Daten

| | |
|--------------------|---------------------|
| Nennspannung: | 200-240 V~ 50-60 Hz |
| Leistungsaufnahme: | 820-980 W |
| Schutzklasse: | I |

Weitere Sicherheitshinweise

- Der Netzstecker ist zu ziehen:
 - Bei Störungen während des Betriebes
 - Vor jeder Reinigung und Pflege
 - Nach dem Gebrauch.
- Um ein versehentliches, mechanisches Einschalten zu verhindern, muss vor dem Aufbewahren immer der Netzstecker aus der Steckdose gezogen werden.
- Rollläden bei Schränken stellen ein besonderes Risiko für ein unbeaufsichtigtes mechanisches Einschalten des Gerätes dar.

- Gerät nur an eine vorschriftsmäßig installierte Schutzkontaktsteckdose anschließen. Netzkabel und Netzstecker müssen trocken sein.
- Den Toaster niemals ohne Aufsicht betreiben.
- Das Netzkabel nicht über scharfe Kanten ziehen oder einklemmen, nicht herunterhängen lassen sowie vor Hitze und Öl schützen.
- Das Gerät nicht auf heiße Oberflächen, wie Herdplatten o.Ä., stellen und nicht in der Nähe offener Flammen betreiben.
- Den Toaster nicht ohne eingeschobene Krümelschublade betreiben.
- Den Netzstecker nicht am Netzkabel oder mit nassen Händen aus der Steckdose ziehen.
- Das Gerät nicht in Betrieb nehmen bzw. sofort Netzstecker ziehen, wenn:
 - Gerät oder Netzkabel beschädigt ist
 - der Verdacht auf einen Defekt nach einem Herunterfallen oder Ähnlichem besteht.
 In diesen Fällen das Gerät zur Reparatur geben.
- Beim Toasteinlegen beachten, dass sich Brotscheiben nicht verklemmen. Sollte dies doch einmal passiert sein, erst den Netzstecker aus der Steckdose ziehen und dann die Störung beseitigen.
- Bitte beim Reinigen nicht mit den Fingern in die Röstschlitze greifen und auch keine Gegenstände (z.B. Gabeln, Messer o.Ä.) einführen.
- Toaster nur aufrecht stehend und frei aufgestellt und fern von anderen Gegenständen betreiben.
- Röstschlitze während des Toastens nicht abdecken. Keine Brotscheiben oder Brötchen auf das Gehäuse legen, da dies zur Überhitzung im Gerät führt.
- Bei Zweckentfremdung, falscher Bedienung oder nicht fachgerechter Reparatur wird keine Haftung für eventuelle Schäden übernommen. Ebenso sind Garantieleistungen in solchen Fällen ausgeschlossen.
- Der Henkel vom Brötchenaufsatz (1) ist kein Griff. Berühren Sie den Brötchenaufsatz (1) nur wenn er abgekühlt ist.
- Bei Toastscheiben kleiner als 85mm Länge, muss der Benutzer beim Herausnehmen der Toastscheiben auf das potenzielle Risiko von Verbrennungen achten.

Erstickungsgefahr!

Kinder nicht mit Verpackungsmaterial spielen lassen.

Verwendung

Der Toaster ist geeignet für XXL-Toastscheiben (bis zu einer Größe von 13x13 cm), lange Brotscheiben, Bagels und Brötchen. Keine Backwaren mit Füllung oder Belag verwenden, wie z. B. Butter, Konfitüre.

LED-Beleuchtung

Die LED-Beleuchtung (4) am Gerätesockel leuchtet solange der Toastvorgang anhält.

Inbetriebnahme

Den Netzstecker an eine Schutzkontaktsteckdose anschließen. Die nicht benötigte Länge der Anschlussleitung kann am Boden aufgewickelt werden.

Vor dem ersten Gebrauch mindestens einen Toastvorgang ohne Brot bei maximaler Einstellung durchführen um den Oberflächenschutz der Heizelemente zu entfernen. Die dabei entstehenden Gerüche sind unbedenklich, trotzdem sollte gut gelüftet werden. Vor jedem Einschalten das Gerät etwas abkühlen lassen.


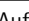 
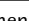 
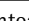 

Achtung Verbrennungsgefahr: Die Temperatur der berührbaren Oberflächen kann sehr heiß werden. Diese bleiben auch nach dem Toast-Vorgang für eine gewisse Zeit heiß. Die Toastscheiben (nicht dicker als 2,8 cm!) in den Röstschlitz einlegen. Kleine Scheiben hochkant in den Röstschlitz stellen, so können sie nach dem Toasten besser entnommen werden.

Den Toaster durch Drücken der Lift-Taste (2) nach unten einschalten. Der Toastvorgang beginnt. Mit den Plus-/Minus-Tasten \oplus \ominus (11)(12) den Bräunungsgrad vorerst auf mittlere Stufe einstellen. Nach Ablauf der Toastzeit wird der Toastvorgang automatisch beendet und der fertige Toast zur Entnahme aus dem Röstschlitz gehoben.

Hinweise zum Bräunungsgrad

Ist der Toast zu hell – eine höhere Bräunungseinstellung durch Drücken der Plus-Taste \oplus (11) für den nächsten Toastvorgang wählen. Ist er zu dunkel – die Minus-Taste \ominus (12) drücken. So können Sie ganz nach Ihrem Geschmack Toast von nur ganz leicht (Einstellung min) bis kräftig, dunkel gebräunt (Einstellung max) toasten. Das Röstergebnis kann bei gleicher Einstellung in Abhängigkeit von Brotsorte, Größe, Feuchtigkeitsgehalt und Dicke der Scheiben unterschiedlich sein. Deshalb für weniger feuchtes Brot und kleinere Scheiben eine geringere Einstellung wählen.

Bei zu starker Bräunung entsteht verstärkt Acrylamid. Beim Toasten ist deshalb ein zu starkes Anbräunen zu vermeiden.

Die verschiedenen Funktionen – 1-Scheibe Toast  (5), Aufwärmen/Nachtoasten  (6), Auftauen  (7), Brötchenaufsatz  (8) und einseitiges Toasten  (9) – können jeweils, sobald die Lifttaste (2) nach unten gedrückt wird, aktiviert werden. Die Taste der ausgewählten Funktion leuchtet auf.

Stopp-Taste (13)

Zum vorzeitigen Abbrechen des Toastvorganges kann die Stopp-Taste (13) gedrückt werden. Sie leuchtet während des Toastvorganges.

1-Scheiben Toast-Taste (5)

Für energieeffizientes Toasten bei nur einer Toastscheibe die 1-Scheibe Toast-Taste (5) drücken.

Aufwärmen-/Nachtoasten-Taste (6)

Unabhängig vom eingestellten Bräunungsgrad wird bereits erkalteter Toast wieder knusprig aufgewärmt und zu helles Brot etwas nachgetoastet.

Auftauen-Taste (7)

Der Toastvorgang wird automatisch verlängert, um gefrorenes Brot auf die gewünschte Bräunung zu toasten.

Brötchenaufsatz-Taste (8)

Der Toaster verfügt über einen Brötchenaufsatz, der bei Bedarf aufgesetzt werden kann. Zwei Brötchen können von beiden Seiten aufgebacken werden. Zu trockene Brötchen vorher etwas anfeuchten, so gelingen sie besser.

Hinweis: Der Brötchenaufsatz darf nur in Verbindung mit dem Programm verwendet werden, da ansonsten die Gefahr der Überhitzung besteht.

Hinweis: Achten Sie darauf, dass sich die Füße des Brötchenaufsatzes nicht über dem Röstschlitz befinden. Für die korrekte Positionierung des separaten Brötchenaufsatzes befinden sich 4 Markierungen seitlich am Röstschlitz.

**Einseitiges Toasten-Taste (9)**

Ideal für Baguette, Brötchen oder Bagel. Dazu z. B. Baguette längs durchschneiden und so in den Röstschlitz einlegen, dass die aufgeschnittene Seite an der Vorderseite liegt. Die Scheibe wird nur auf der Vorderseite (Nähe WMF Logo) getoastet.

Krümelschublade (14)

Beim Toasten herabfallende Krümel sammeln sich in der Krümelschublade (14). Zum Öffnen geben die Krümelschublade (14) drücken und aus dem Gerät ziehen.

Reinigung und Pflege

Vor dem Reinigen Netzstecker aus der Steckdose ziehen und Gerät abkühlen lassen. Im Röstschlitz an den Gittern und dem Heizelement festgebackene Krumen mit einem harten Pinsel entfernen. Dabei das Gerät nicht kippen, sonst entleert sich die Krümelschublade in das Geräteinnere. Die Schublade anschließend herausziehen, reinigen und danach wieder einschieben. Den Brötchenaufsatz (1) nicht in der Spülmaschine reinigen. Den Toaster keinesfalls in Wasser tauchen. Das Geräteäußere nur mit einem feuchten Tuch und etwas Spülmittel reinigen. Keine scharfen oder scheuernden Reinigungsmittel verwenden. Nicht mit Backofen-/Grillspray reinigen. Keinen Dampfreiniger benutzen.



Das Gerät entspricht den Europäischen Richtlinien 2014/35/EU, 2014/30/EU und 2009/125/EU.



Dieses Produkt darf am Ende seiner Lebensdauer nicht über den normalen Haushaltsabfall entsorgt werden, sondern muss an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden. Die Werkstoffe sind gemäß ihrer Kennzeichnung wiederverwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutze unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstelle. Die Löschung von eventuell vorhandenen personenbezogener Daten auf den zu entsorgenden Altgeräten muss vom Endnutzer eigenverantwortlich vorgenommen werden.

Änderungen vorbehalten.

Instrukcje obsługi

Toaster

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions.

Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.




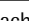 

Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Niniejsze urządzenie spełnia wymagania dyrektyw 2014/35/WE, 2014/30/WE oraz 2009/125/WE.



Po zakończeniu okresu użytkowania nie wolno usuwać niniejszego produktu w normalnych odpadach komunalnych, lecz należy go oddać do punktu zbiórki i recyklingu urządzeń elektrycznych i elektronicznych.

Materiały nadają się do powtórnego wykorzystania, zgodnie z ich odpowiednim oznaczeniem. Ponowne używanie starych urządzeń, przekazywanie ich do recyklingu lub wykorzystanie w inny sposób stanowi istotny wkład w ochronę środowiska naturalnego.

Informację o lokalizacji najbliższego punktu zbiórki urządzeń można uzyskać w odpowiednim urzędzie gminy.

Zastrzega się możliwość wprowadzenia zmian.

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions.

Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.




 

Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Zařízení odpovídá evropským směrnicím 2014/35/EC, 2014/30/EC a 2009/125/EC.



Tento výrobek nesmí být na konci životnosti likvidován jako běžný domácí odpad, ale musí být umístěn do sběrného místa pro recyklaci elektrických a elektronických zařízení.

Materiály jsou recyklovatelné podle jejich označení. Opětné použití, recyklace a další využití starých zařízení je důležitým příspěvkem k ochraně našeho životního prostředí. O vhodném sběrném místě se, prosím, informujte u místních správních úřadů.

Dokument podléhá změnám.

Návod na používanie

Toaster

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions. Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.






Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Zariadenie zodpovedá európskym smerniciam 2014/35/EC, 2014/30/EC a 2009/125/EC.



Tento výrobok nesmie byť na konci životnosti likvidovaný ako bežný domáci odpad, ale musí byť umiestnený do zberného miesta na recykláciu elektrických a elektronických zariadení.

Materiály sú recyklovateľné podľa ich označení. Opätovné použitie, recyklácia a ďalšie využitie starých zariadení je dôležitým príspevkom k ochrane životného prostredia.

O vhodnom zbernom mieste sa informujte na miestnych úradoch.

Dokument podlieha zmenám.

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions. Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220– 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.




 

Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



A készülék megfelel a 2014/35/EU, 2014/30/EU és a 2009/125/EU irányelveknek.



Élettartamának lejártát követően a készülék nem ártalmatlanítható a kommunális háztartási hulladékkal együtt, hanem az elektromos és elektronikai készülékeket gyűjtő udvarban kell leadni, újrahasznosítás céljából. Az anyagok a címkén szereplő információk szerint használhatók újra. Az újrahasznosítással jelentősen hozzájárul a környezet védelméhez.

A legközelebbi gyűjtőhely címéről érdeklődjön a helyi önkormányzatnál.



A szöveg módosításának jogát fenntartjuk.

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions. Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.




 

Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Aparatul respectă Directivele europene 2014/35/CE, 2014/30/CE și 2009/125/CE.



La sfârșitul duratei sale de viață, acest produs nu trebuie aruncat la coșul de gunoi menajer, ci trebuie adus la un punct de colectare pentru reciclarea aparatelor electrice și electronice.

Materialele sunt reciclabile în conformitate cu etichetarea lor. Reutilizarea, reciclarea și alte modalități de reutilizare a aparatelor vechi au o contribuție importantă pentru protejarea mediului înconjurător.

Vă rugăm să solicitați informații de la autoritățile dvs. locale cu privire la punctul corespunzător de eliminare.

Ne rezervăm dreptul de modificare.

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions. Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.






Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.

Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.
Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Този уред отговаря на европейски директиви 2014/35/ЕО, 2014/30/ЕО и 2009/125/ЕО.



В края на живота си този продукт не трябва да се изхвърля заедно с обикновените битови отпадъци, а да се предаде в пункт за рециклиране на електрически и електронни уреди.

Материалите подлежат на рециклиране съгласно етикетите си. Повторната употреба, рециклирането и другата употреба на стари уреди е важен принос към опазването на околната среда.

Моля, обърнете се към местната администрация за подходящ пункт за предаване.

Подлежи на промени.

Uputa za uporabu

Toaster

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions.

Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.




 

Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Uređaj udovoljava europskim direktivama 2014/35 / EC, 2014/30 / EC i 2009/125 / EC.



Ovaj proizvod ne smije se zbrinjavati s normalnim otpadom iz domaćinstva kraj njezina vijeka trajanja, ali se mora isporučiti na sabirno mjesto za recikliranje električnih i elektroničkih uređaja. Materijali se mogu ponovno upotrijebiti u skladu s

njihovom identifikacijom. Bit će važan doprinos zaštiti našeg okoliša recikliranjem korištenih uređaja.

Pitajte odgovorne u vašoj zajednici za odgovarajuće mjesto za zbrinjavanje.

Podložno promjenama.

Important safety instructions

- The device must not be operated via an external timer or remote control.
- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device.
Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cable out of the reach of children under eight years old.
- **Attention:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.

Risk of electric shock!

- The appliance may only be connected to a 230 V mains socket with an earth wire that has been installed pursuant to regulations. It must be ensured that the earthing system of the household electrical installation has been installed pursuant to regulations and that the safety equipment (RCCB) functions correctly.
- During operation, do not reach into the toaster or insert any objects.
- **Note:** Check the RCCB regularly by pressing the test button.
- **Note:** Bread slices can burn in toasters. Therefore, do not use the device near or under flammable objects (e.g. curtains, wall cupboards) and always supervise.
- **Caution:** risk of burns! During toasting, the touchable surfaces of the toaster can get very hot. Please ensure you only touch the controls.

- If the appliance's connection cable is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- Do not immerse the toaster in water.
- For cleaning do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Falling crumbs are collected in the crumb tray during toasting. To empty, briefly press against the crumb tray. You will then be able to pull it out of the device.
- This device is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The appliance is not designed for sole commercial use.

Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions. Observe the safety instructions during use.

Technical Data

| | |
|--------------------|----------------------|
| Rated voltage: | 220- 240 V~ 50-60 Hz |
| Power consumption: | 820-980 W |
| Protection class: | I |

Additional safety instructions

- The mains plug is to be pulled:
 - If malfunctions occur during use
 - before cleaning and care
 - after use.
- To prevent the toaster being mechanically switched on by mistake, the plug must always be disconnected prior to storage.
- Roller doors on cupboards represent a particular risk as they can catch the controls and inadvertently switch the appliance on.
- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Never operate the toaster unattended.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Do not place the device on hot surfaces, such as hot plates or similar, and do not operate near open flames.
- Do not operate the toaster without the crumb tray inserted.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or connect it from the mains plug immediately if:
 - The appliance or mains cable is damaged
 - There is any suspicion of a fault after dropping the appliance or similar.
In such cases, send the appliance to be repaired.
- When inserting the toast, ensure that the bread slices do not get jammed. However, should this happen, first pull the power plug and then remove the interference.
- Do not reach into the bread slots with your fingers or objects, such as forks, knives, etc.
- Only operate the toaster in the upright position away from other objects.
- Do not cover the bread slot during toasting. Do not lay any bread slices or rolls on the casing, as this causes the device to overheat.
- No liability is assumed for any damages in cases of misuse, improper operation or unprofessional repairs. Claims under warranty are likewise excluded in such cases.
- Grip of roll attachment (1) is not a handle. Only touch the roll attachment (1) when it is cooled down.
- If toast of small bread slices is less than 85mm length, the user must pay attention to the potential risk of burning when taking out the slices.

Danger of suffocation!

Do not allow children to play with packaging materials.

Use

The toaster is ideal for XXL toast slices (up to a size of 13x13 cm), long slices of bread, bagels and rolls. Do not use the appliance for baked goods with a filling such as butter or jam.

LED lighting

The LED lighting (4) on the appliance base remains lit during toasting.

Initial operation

Connect the mains plug to an earthed socket. Any surplus length of the connecting cable can be wound at the base.

Before using the appliance for the first time, run the toaster through at least one toasting cycle without bread at the maximum setting in order to remove the surface protection from the heating elements. The resulting odours are harmless, but this should nevertheless be performed in a well-ventilated area. Allow the device to cool off somewhat before switching it on every time.

Warning: risk of burns: Accessible surfaces can become very hot.

They remain hot for a while even after toasting is finished. Insert the toast slices (no thicker than 2.8 cm) into the bread slot. Place small slices upright in the bread slot so that they are easier to remove after toasting.






Press the lift button (2) down to switch on the toaster. Toasting begins and the bread lift is held until the appliance automatically stops after toasting and the finished toast is raised from the bread slot for removal.

To adjust the browning level please press Plus/ Minus buttons **+** **-** (11) (12) during toasting.


Information about the degree of browning

If the toast is too light, select a higher browning level by pressing the Plus button **+** (11) for the next toasting cycle. If it is too dark, press the Minus button **-** (12). You can brown your toast according to your own taste, from just slightly browned (min. setting) to strong, dark brown (max. setting). The toasting result can vary for the same setting depending on the bread type, size, moisture content and thickness of the slices. Therefore, select a lower setting when toasting less moist bread and smaller slices.

When toasted too darkly, concentrated acrylamide forms. You should therefore avoid toasting too darkly.

The various functions – 1-slice of toast  (5), warming/retoasting  (6), defrosting  (7), roll attachment  (8) and single-sided toasting  (9), can be activated as soon as the lift button (2) is pressed downwards. The button for the selected function lights up.

Stop button (13)

To interrupt the toasting process prematurely, press the stop button  (13). It lights up during the toasting cycle.

1-slice of toast button (5)

For energy efficiency, when only 1-slice of toast is added into the toaster, you are able to select the 1-slice toast button (5).

Warm/retoast button (6)

Toast that has already cooled down is warmed up again to become crispy (regardless of the browning level) and bread that is too light is gently toasted.

Defrost button (7)

The toasting cycle is automatically extended to toast frozen bread to the desired browning level.

Roll attachment button (8)

The toaster has a roll attachment that can be fitted if needed. Two rolls can be baked from both sides. Slightly wet bread that is too dry beforehand so that it toasts better.

Note: The roll attachment can then only be used in combination with the programme, as otherwise there is a risk of overheating.

Note: Make sure that the feet of the roll attachment are not above the bread slot. There are 4 markings at the side of the bread slot to help with the correct positioning of the separate roll attachment.

**Single-sided toasting button (9)**

Ideal for baguettes, rolls and bagels. Slice the baguette, for example, lengthways and then insert it in the bread slot lengthways so that the cut side is facing the front. The slice will only be toasted on the front (the side where the WMF Logo is located).

Crumb tray(14)

Falling crumbs are collected in the crumb tray (14) during toasting. To open, press on the crumb drawer (14) and pull out of the appliance.

Cleaning and maintenance

Before cleaning, disconnect the appliance from the mains and allow the appliance to cool down. Use a hard brush to remove crumbs sticking to the grids and the heater. Do not tilt the appliance while you do this, or crumbs will spill from the crumb tray into the inside of the toaster. Then pull out the crumb tray, clean it and reinsert. Do not clean the roll attachment (1) in the dishwasher.

Never immerse the toaster in water. Wipe the outside of the appliance only with a damp cloth and some washing-up liquid. Do not use harsh or abrasive cleaning agents. Do not clean with oven/grill spray. Do not use a steam cleaner.



Naprava izpolnjuje zahteve direktiv 2014/35/EU, 2014/30/EU in 2009/125/EU.



Tega izdelka po koncu uporabne življenjske dobe ni dovoljeno odlagati med običajne gospodinjne odpadke, temveč ga je treba oddati na zbirnem mestu za odpadno električno in elektronsko opremo.

Materiale je treba reciklirati v skladu z njihovo oznako. Ponovna uporaba, recikliranje ali drugačna uporaba starih naprav pomembno prispevajo k varovanju našega okolja.

Vprašajte predstavnika lokalne uprave glede ustreznih mest za odlaganje.

Pridružujemo si pravico do sprememb.

POLSKA

contact-pl@wmf.com



801 300 420

Groupe SEB Polska
Ul. Inflancka 4C
00-189 Warszawa

SLOVENSKO

contact-sk@wmf.com



232 199 932

GROUPE SEB Slovensko, spol. s r.o.
Cesta na Senec 2/A
821 04 Bratislava

ROMANIA

contact-ro@wmf.com



031 130 93 03

GROUPE SEB ROMÂNIA Str.
Ermil Pangratti nr. 13
011881 București

HRVATSKACROATIA

contact-hr@wmf.com



(01) 30 15 295

SEB mku & p d.o.o.
Sarajevska 29,
10000 Zagreb

SLOVENIA

contact-si@wmf.com



02 234 94 95

GROUPE SEB Slovensko,
spol. s r.o. Cesta na Senec 2/A
821 04 Bratislava

ČESKÁ REPUBLIKA

contact-cz@wmf.com



773 070 853

Groupe SEB ČR s.r.o.
Futurama Business Park (budova A)
Sokolovská 651/136a
186 00 Praha 8

HUNGARY

contact-hu@wmf.com



06 1 272 7872

GROUPE SEB CENTRAL-EUROPE
Kft.2040 Budaörs,
Puskás Tivadar út 14

БЪЛГАРИЯBULGARIA

contact-bg@wmf.com



07 002 00 59

Груп Себ България ЕООДбул.
България 58 С, ет 9, офис 30
1680 София

Kundendienst-Adresse:

WMF consumer electric GmbH
Standort Trepesch
Steinstraße 19
D-90419 Nürnberg
Germany
Tel.: +49 (0) 7331 256 256
eMail: service-wmf@wmf-ce.de

Hersteller:

WMF consumer electric GmbH
Messerschmittstraße 4
D-89343 Jettingen-Scheppach
Germany
www.wmf-ce.de

Änderungen vorbehalten

04 0000 0000_IFU_01-1903